

Sterilization of Polyolefins

A Methodological Overview



Introduction

The process of sterilization refers to any action used to eliminate or kill any form of life present on a surface or contained in a liquid. Currently, a variety of sterilization methods can be used to reduce microbial load on medical devices and pharmaceutical products in order to minimize risk for patients.

Backed by more than 30 years of industry experience, LyondellBasell offers a range of polyethylene and polypropylene resins selected by customers for healthcare applications. Experience has shown that while several different methods of sterilization can be employed and ultimately considered suitable, each method can also have an impact on the polyolefin material selected, depending upon conditions.

This quick reference guide provides an overview of the sterilization methods available and their effects on polyolefin performance.

General Overview

Sterilization can be achieved through a combination of heat, chemicals, irradiation, high pressure and filtration. See Table 1 for more details.

Heat Sterilization

Vapor (steam) sterilization using an autoclave is one of the most widely used methods for heat sterilization of polypropylene and polyethylene packaging in pharmaceutical applications. Standard

conditions typically use saturated steam at a constant temperature of 121 °C (250 °F). At this temperature, a holding time of at least 15 minutes is required to achieve sterility. Fast autoclaving uses temperatures of 134 °C (273 °F). Polypropylene can typically withstand all of these sterilization temperatures when correctly molded.

Sensitive pharmaceutical substances such as dextrose (D-glucose) and packaging materials such as LDPE cannot withstand sterilization temperatures of 121 °C. When they are used, 'equivalence' methods can be applied to calculate the holding time required at the lower temperature required.

The most widely known equivalence method used for steam sterilization is the F_0 method; referred to in both European Pharmacopeia* and US Pharmacopeia** as an alternative to standard sterilization conditions.


In Figure 1, *Purell* PE 3420F under $F_0 = 8$ conditions can be sterilized in an autoclave 97 minutes faster than *Purell* PE 3020D. Under $F_0 = 12$ conditions, also shown in figure 1, the time saving is nearly 150 minutes.



Table 1: Types of Sterilization

Method	Description	Resin Requirement	Remark
Heat sterilization	Temperature and time needed dependent upon choice of material; typically uses steam autoclave or equivalent.	Sufficient heat resistance	
Gas sterilization, ethylene oxide (EO/EtO)	Ethylene oxide gas kills the organism by reacting with its cellular constituents in a three-stage process: 1. Preconditioning 2. Sterilization 3. Degassing	None	Relatively easy handling for mass-produced articles. Special safety measures and waste management required.
Radiation (Gamma)	Cobalt 60 radioactive source delivering variable dose, measured in kGy.	Good impact strength and resistance to yellowing	Packed products can be sterilized.
Radiation (E beam)	A heated cathode generates a focused beam of electrons at a frequency of 50 to 100 Hz.	As above	Short treatment time and higher dosage rate. Packed products can be sterilised but penetration less than gamma.
Radiation (other)	Beta, X-ray and UV available, but not commonly used	As above	X-ray has higher penetration than gamma. Packed products can be sterilized.

Figure 1 – Example of Holding Time and Sterilization Temperature Using an Autoclave

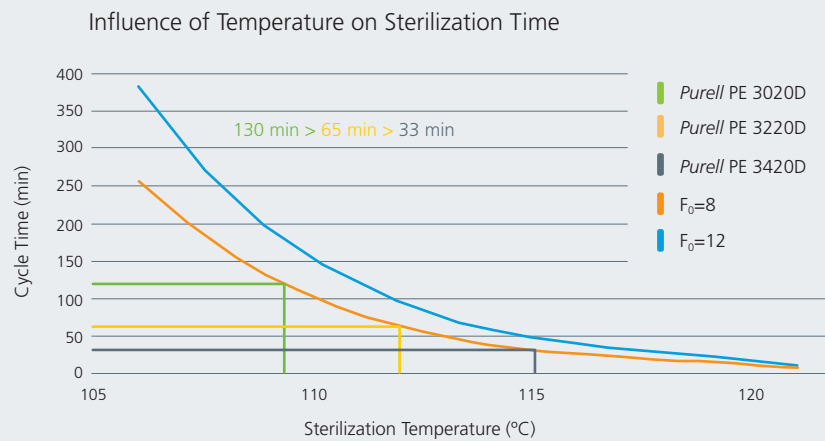

*Ph. Eur. 5.1.5: Application of the F₀ concept on steam sterilization of aqueous preparations **USP 24, NF19, p. 2144: Steam sterilization: "Apart from the description of the sterilization cycle, using a temperature of 121°C, the F₀ concept may be appropriate."

Gas Sterilization

Ethylene oxide (EO or EtO) gas is the most common sterilization method used in more than 70 percent of all sterilizations, and in 50 percent of all disposable medical devices. Treatment is generally carried out between 30 °C and 60 °C with relative humidity above 30 percent; and a gas concentration between 200 and 800 mg/l for a duration of at least three hours. EtO can kill all known viruses, bacteria and fungi, including bacterial spores, and is compatible with most materials even when applied repeatedly. EtO can be used in polypropylene and polyethylene sterilization.

Radiation Sterilization

Methods of sterilization exist using radiation such as gamma rays, electron beams, X-rays, ultraviolet light and subatomic particles.

Gamma rays have high penetration and are frequently used for sterilization of disposable medical equipment, such as syringes, needles, cannulas and IV sets in their final packaging. Gamma irradiation requires bulky shielding for the safety of the operators and safe storage of the radioisotope from which the gamma radiation is emitted.

Polyolefin resins used in applications requiring gamma irradiation must be correctly additivated to mitigate the effects of radiation on the polymer structure. Certain additives typically used in polyolefin resins and masterbatches are not compatible with gamma irradiation; without correct modification, these resins

may turn yellow and become brittle. Additionally, the actual delivered dosage of radiation (rather than the dose emitted) should be carefully considered. *Purell* HP371P and HM671T can be considered for this type of sterilization.

Besides electromagnetic irradiation with gamma rays, particle radiation can also be used for sterilization. The best known form is radioactive beta radiation, which results in the release of energy-rich electrons. Compared to gamma, it has less penetration and a reduced detrimental effect on material properties. However, specialty materials are regularly used.

While beta-radiation needs a radioactive source (typically Sr-90), the electron-beam process creates free electrons by cathode discharge and subsequent particle acceleration. These sterilization facilities offer the advantage of on/off technology without the risk of handling radioactive sources, and provide a much higher dosing rate than gamma or X-rays. Due to the higher dosing rate, less exposure time

is needed, thereby reducing potential degradation of polymers. One limitation is that electron beams are less penetrating than either gamma or X-rays.

High-energy X-rays are a form of ionizing energy that irradiates large packages and pallet loads of medical devices. Their penetration is sufficient to treat multiple pallet loads of low-density packages with very good dose uniformity ratios. X-ray sterilization is an electricity-based process which does not require chemical or radioactive material.

Ultraviolet (UV) light irradiation is useful only for sterilization of surfaces and some transparent objects, and is not typically used for polyolefins. UV irradiation is routinely used to sterilize the interiors of biological safety cabinets between uses, but is ineffective in shaded areas, including areas under dirt (which may become polymerized after prolonged irradiation, making it very difficult to remove). If exposed for prolonged periods of time, it damages some plastics such as polystyrene foam.

Conclusion

When considering a sterilization method to use for a specific *Purell* resin, many factors must be taken into account, such as the application, filling substance, when the sterilization will be conducted (i.e., in-line, after packaging, etc.), the *Purell* grade selected and the effects of sterilization on the specific material. Table 2 provides an overview of polyolefin performance under different sterilization methods.

Table 2 – Sterilization Resistance of Polyolefins

	Steam Sterilization	Gas Sterilization	Radiation Sterilization	Remarks
PP	Resistant, including fast autoclaving for homopolymers and block (heterophasic) copolymers	EtO resistant	Some speciality <i>Purell</i> PP grades available	Autoclaving temperatures of 121 °C possible for most <i>Purell</i> PP products. Radiation is critical for PP.
HDPE	Resistant, excluding fast autoclaving	EtO resistant	Used, but cross-linking can occur	Autoclaving temperatures of 121 °C possible. Radiation can be critical for HDPE.
LDPE	Resistant at lower temperatures	EtO resistant	Used, but cross-linking can occur	Equivalence methods used for steam sterilization. No additives used in most <i>Purell</i> PE products.

Note: Polyolefins are not recommended for repeated sterilization.

P.O. Box 2416
3000 CK Rotterdam
The Netherlands

Tel: +31 10 275 5500

North America Offices

One Houston Center, Suite 700
1221 McKinney Street
Houston, TX 77010
P.O. Box 3646 (77253-3646)

Tel: +1 713 652 7200

Equistar Chemicals, LP¹
Lyondell Chemical Company²
Newtown Square Center
3801 West Chester Pike
Newtown Square, PA 19073

¹ Tel: +1 610 550 3300

² Tel: +1 610 359 2000

European Sales Offices

Basell Deutschland GmbH
Industriepark Hoechst
Building B 852
65926 Frankfurt am Main
Germany

Tel: +49 69 305 85800
Fax: +49 69 305 85803

Basell Deutschland GmbH
Bruehler Strasse
50389 Wesseling
Germany

Tel: +49 2236 726000
Fax: +49 2236 726034

Basell Sales & Marketing Company B.V.
Groot Handelsgebouw
Weena 737
3013 AM Rotterdam
The Netherlands

Tel: +31 10 71 36 010
Fax: +31 10 71 36 400

Basell UK Ltd.
Carrington Site
Urmston, M31 4AJ, UK

Tel: +44 161 776 3020
Fax: +44 161 776 3027

Basell France SAS
Chemin Départemental 54
Raffinerie de Berre
13130 Berre l'Etang
France

Tel: +33 (0) 4 42 74 42 74

Basell Italia S.r.l.
Piazza Montanelli 20
I-20099 Sesto San Giovanni (Milano),
Italy

Tel: +39 02 24 342 1
Fax: +39 02 24 342 600

Representative Office of
Basell Sales & Marketing Company B.V.
Uspensky per., 10., bld 1
127006 Moscow, Russia

Tel: +7 (495) 641 33 22
Fax: +7 (495) 641 33 23

Basell Poliolefinas
Comercial Española S.L.
Av. Diagonal, 615, 4th floor
E-08028 Barcelona, Spain

Tel: +34 93 365 2000
Fax: +34 93 365 2100

Basell Slovakia s.r.o
Prievozska 4/A
821 09 Bratislava, Slovakia

Tel: +421 2 5827 5136
Fax: +421 2 5827 5150

Basell Polyolefin Istanbul Ticaret Limited Sirketi,
Sahrayi Cedit Mahallesi
Derya Sokak No. 14,
Kat. 4 No. 9 Kadikoy,
Istanbul, Turkey

Tel: +90 216 468 6800
Fax: +90 216 302 0541

India Sales Office

Basell Polyolefins India Pvt. Ltd.
303/305, B wing
Delphi Building
Hiranandani Business Park
Powai, Mumbai-400076, India

Tel: +91 22 6706 1111
Fax: +91 22 6706 1100

South and Central America Regional Office

Petroken Petroquimica Ensenada S.A.
Avda. Eduardo Madero 1020, 14/F
(C1106ACX) Buenos Aires, Argentina

Tel: +54 11 4393 3010
Fax: +54 11 4393 3085

Asia-Pacific Offices

Basell Asia Pacific Ltd.
12/F Caroline Centre
Lee Gardens Two
28 Yun Ping Road
Causeway Bay, Hong Kong

Tel: +852 2577 3855

Australia Sales Office

LyondellBasell Australia Pty. Ltd.
Level 2, 199 Toorak Road
South Yarra VIC 3141
Melbourne, Australia

Tel: +61 3 9829 9455
Fax: +61 3 9829 9531

Africa and the Middle East

Basell International Trading FZE
Regional Office
Dubai Airport Free Zone
P.O. Box 293611
Dubai, U.A.E.

Tel: +971 4 204 5970
Fax: +971 4 204 5969

You can find out more about us by
visiting our website at: lyondellbasell.com

Before using a product sold by one of the LyondellBasell family of companies, users should make their own independent determination that the product is suitable for the intended use and can be used safely and legally. SELLER MAKES NO WARRANTY; EXPRESS OR IMPLIED (INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE) OTHER THAN AS SEPARATELY AGREED BETWEEN THE PARTIES IN WRITING. This product(s) may not be used in the manufacture of any US FDA Class III Medical Device or Health Canada Class IV Medical Device and may not be used in the manufacture of any US FDA Class II Medical Device or Health Canada Class II or Class III Medical Device without the prior written approval by Seller of each specific product or application. Users should review the applicable Material Safety Data Sheet before handling the product.

All technical assistance and advice is furnished by LyondellBasell without compensation. LyondellBasell assumes no obligation or liability with respect to such advice and assistance and disclaims any and all warranties with respect to such advice and assistance.

All information ("Information") contained herein is provided without compensation and is intended to be general in nature. You should not rely on it in making any decision. LyondellBasell accepts no responsibility for results obtained by the application of this Information, and disclaims liability for all damages, including without limitation, direct, indirect, incidental, consequential, special, exemplary or punitive damages, alleged to have been caused by or in connection with the use of this Information. LyondellBasell disclaims all warranties, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, that might arise in connection with this information.

© LyondellBasell Industries Holdings, B.V. 2011

Purell is a trademark owned or used by LyondellBasell group companies and is registered in the U.S. Patent and Trademark Office.

